Smart Energy Hot Water

SMRT-HOT-WTR-30-S1 , SMRT-HOT-WTR-50-S1

SMART ENERGY



Maximizes self-consumption by storing excess solar energy as hot water

- Seamless integration with all SolarEdge inverters, and the monitoring platform
- Adjusts power supplied to the heater based on available PV power (up to 5.0kW)
- Built-in water tank power-consumption meter
- Simple wall mount installation
- Wireless communication with the inverter
- Suitable for powering purely resistive loads only
- Optional temperature sensor for optimized heating


/ Smart Energy Hot Water

SMRT-HOT-WTR-30-S1 , SMRT-HOT-WTR-50-S1

	SMRT-HOT-WTR-30-S1	SMRT-HOT-WTR-50-S1	UNIT
ELECTRICAL SERVICE			
Operating Voltage Range	205-264		Vac
AC Frequency	50		Hz
Nominal Voltage	230		Vac
Supported Grids	L / N / PE		
Maximum Supported Load Size	3.0	5.0	kW
Input over voltage protection(1)	264		Vac
Maximum Load Current Rating	13	22	A
Minimum Output Power	5% of load rating		
Load Type	Resistive		
Efficiency	> 98		%
Output Over-current Protection	13	22	A
External Over-current Protective Device Rating	≥ 20	≥ 25	A
Type of Action	Type 1 C		
COMMUNICATION			
Supported Communication Protocol	ZigBee Home Automation		
Device Configuration	Via the inverter LCD, the monitoring platform/ app, or SetApp; Ethernet connection is required		
Nominal Transmit Power	11.8		dBm
Operating Frequency Range	2.4 - 2.5		GHz
EIRP with Antenna	16.8		dBm
Maximum Emitted Power	≤20		dBm
Bandwidth	2		MHz
Modulation	O-QPSK with DSSS coding		
Outdoor (LOS) Range	400 / 1312		m / ft
Indoor Range(2)	50 / 164		m / ft
STANDARD COMPLIANCE			
Radio	ETSI EN 300 328 V 1.8.1, ETSI EN 301 489-1, ETSI EN 301 489-17		
Safety	IEC-60730 -1		
Emissions	EN61000-6-1,2,3, EN61000-4-2,3,4,5,6,8,11, EMC directive 2014/30/EU		
INSTALLATION SPECIFICATIONS			
Dimensions (H x W x D)	375 x 240 x 110 / 14.7 x 9.5 x 4.5		mm / in
Weight	5.3 /11.7		kg / lb
Operating Temperature Range	-10 to +50 / 14 to 122		˚C / ˚F
Maximum distance between Device and Load/Cable cross section	3/10 for 15 AWG/1.5 mm^2 20/65 for 13 AWG/ 2.5 mm^2	3/10 for 13 AWG/2.5 mm^2 20/65 for 11 AWG/ 4 mm^2	m / ft
Terminal Block Minimum Wire Cross Section	1.5 / 15		mm^2 / AWG
Interfaces	1. AC in 2. AC out 3. External antenna RP SMA		
Cable Gland Diameters	2 glands 6-12, 1 gland 4-8		
Mounting Type	Wall mount		
IP Rating	IP65		
SENSOR SPECIFICATIONS(3)			
Sensor type	Pt100 (100 Ohms @ 0°C) to IEC 751, Class B, 3/4 wire		
Construction	6.0mm diameter stem in 316 stainless steel		
Termination	IP67 aluminium alloy weatherproof connection head with 4 wire connection block, M20 x 1.5mm cable entry (gland included)		
Process connection	1/2"BSP parallel		
Probe temperature range	-100°C to +450°C (connection head @ 170°C)		
Probe Diameter	Ø6mm (1/4")		
Probe length	150mm 1/2"BSPP		
Temperature Accuracy	1		%

(1) The device stops diverting power to the load when this threshold is exceeded
(2) Approximate values. May differ depending on specific installation conditions
(3) Temperature sensor ordered separately. For more information please contact SolarEdge

/ SolarEdge System with Smart Energy Hot Water

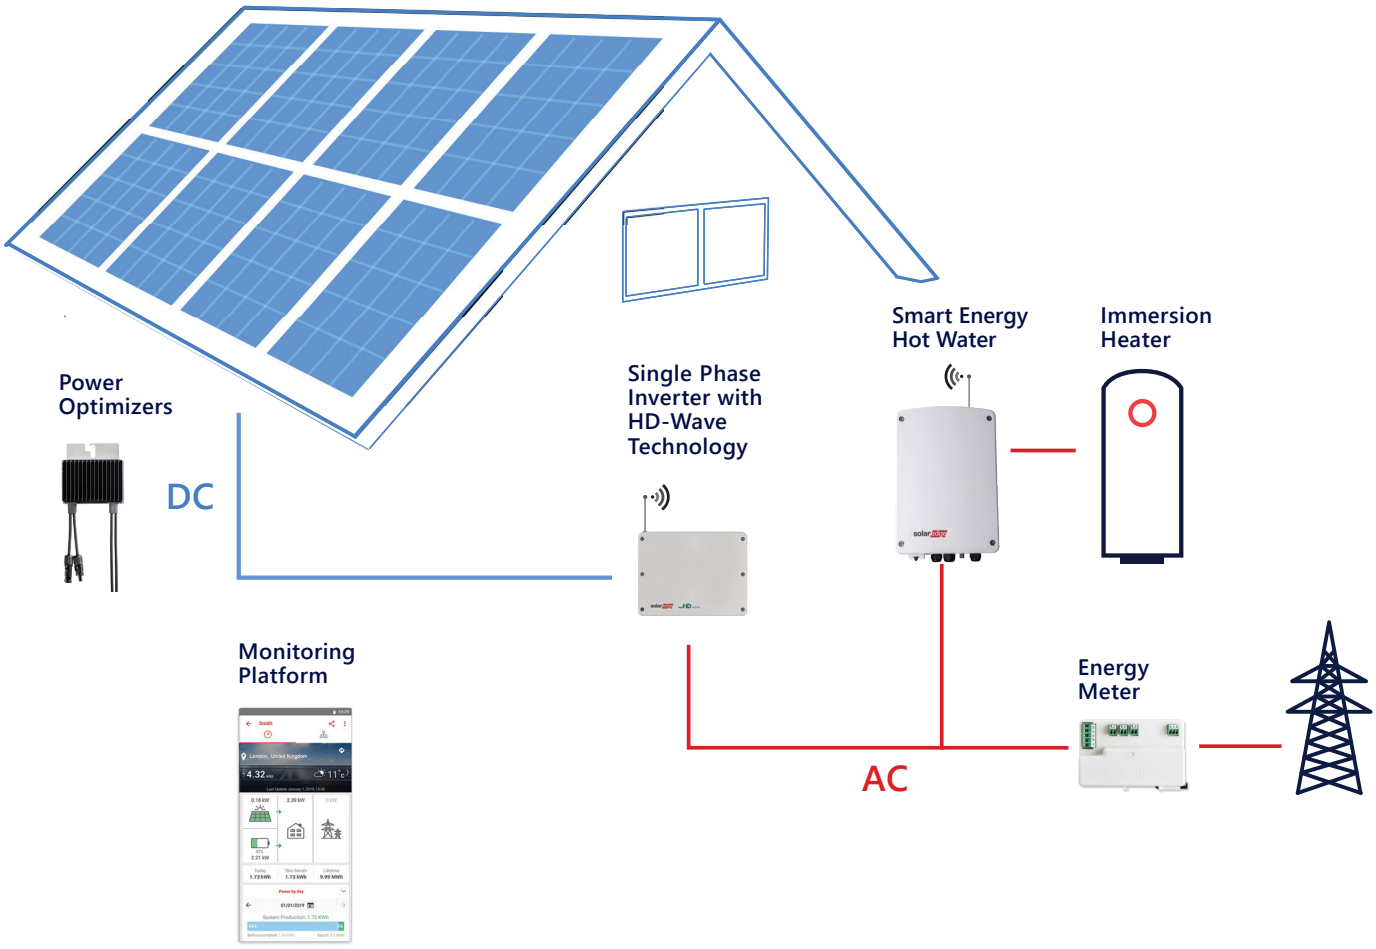

Temperature Sensor(3)



CE

© SolarEdge Technologies, Inc. All rights reserved. SOLAREDGE, the SolarEdge logo, OPTIMIZED BY SOLAREDGE are trademarks or registered trademarks of SolarEdge Technologies, Inc. All other trademarks mentioned herein are trademarks of their respective owners. Date: 02/2021/V01/ENG ROW. Subject to change without notice.

solaredge

Temperature Sensor Kit Installation

This document describes how to install a SolarEdge PT100 temperature sensor and connect it to the residential water heater and to the SolarEdge Smart Energy Hot Water device.

The sensor allows you to measure the water temperature in the water heater. After installing the sensor, you will be able to view the temperature using SolarEdge monitoring platform.

Package Contents

- PT100 sensor (15 cm long probe)
- Sensor 3-wire cable (3m)
- T Joint pipe fitting with NPT (USA)/ BSP (Europe & APAC) threaded bushing adapters
- Installation guide



Figure 1: Sensor, cable and T-joint fitting (with bushing adapters)

Installation Guidelines

- Installation of the temperature sensor should be carried out by a certified personnel.
- Connect the sensor to the hot water outlet pipe, at the upper part of the water heater. This way only a small amount of water should be drained so that the water level is below the hot water pipe.
- You can use a third-party 3-wire connection cable, up to 20 meters / 65ft in length.
- Connect the T-joint at the hot water outlet pipe so the PT100 sensor can be directly connected to the tank.
- The original safety temperature and pressure valve is not used for the installation of the temperature.

Installing the Sensor

Figure 2. illustrates the sensor connection.

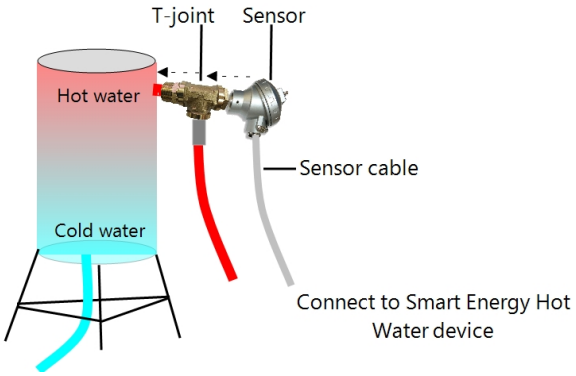


Figure 2: Installing the Sensor

1. Use the pressure valve to drain water from the water tank, until the water level is below the hot water outlet pipe connection. This will ensure that when the outlet hose is removed, water would not spill out.
2. Connect the T-joint fitting to the water tank (See *Figure 3*):
   a. Install the two bushing adapters on the T-joint fitting.
   b. Connect the hot water hose to the T-joint fitting openings (left and central openings) and tighten the adapters.
   c. Connect the T-joint fitting to the water tank using the adapter that includes the external thread.

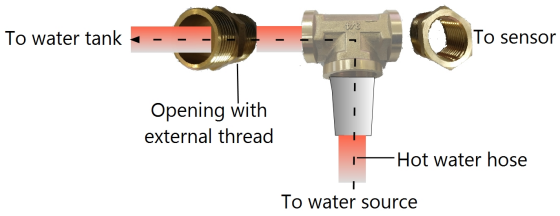


Figure 3: T-joint fitting connection

3. Insert the sensor into the other T-joint fitting opening and tighten by screwing to the T-Joint fitting.
4. Connect the sensor cable to the sensor See *Figure 4*:
   a. Open the sensor lid.
   b. Insert the cable with the fork terminals through the cable opening.
   c. Connect the wires to the terminals: Red wire to red terminal; Blue (or other color) wires to green (or other color) terminals.
   d. Close the lid.

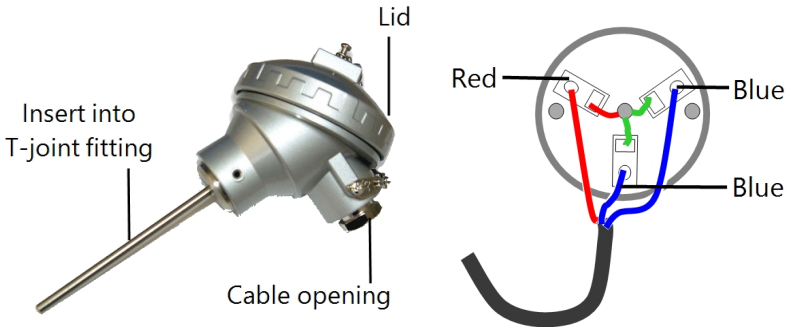


Figure 4: Sensor interfaces

5. Connect the other end of the sensor cable to the Smart Energy Hot Water device (See *Figure 5*):
   a. Turn OFF:
      - The ON/OFF/P switch of the Smart Energy Hot Water device
      - The AC switch on the main distribution panel
   b. Release the four cover screws of the Smart Energy Hot Water device and open the cover.
   c. Insert the sensor cable end through the communication gland located at the bottom of the Smart Energy Hot Water.
   d. Connect the three wires to the left temperature input terminal block (marked J3) Red wire to pin 1 (left-most); two blue wires to pins 2 and 3.

NOTE

When using a third-party 2-wire temperature sensor, connect wires to pins 1 and 2. After that, connect pin 2 and pin 3 with a jumper (not supplied by SolarEdge).

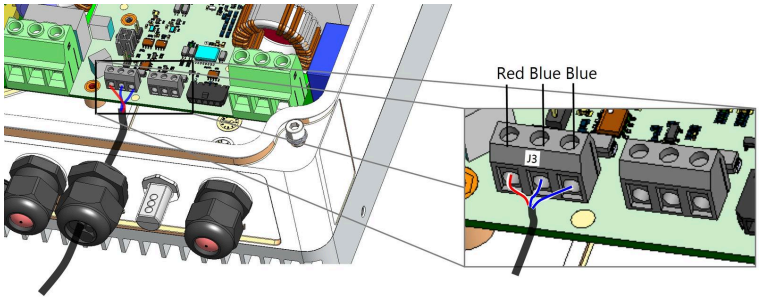


Figure 5: Connecting the sensor cable to the Smart Energy Hot Water device

6. Verify that a jumper socket *is assembled* on **J5** pin header. This will allow usage of the PT100 sensor connected to **J3** connector. Make sure to use the correct pin header matching the connector (*Figure 5*):

- J3 connector - pin header J5
- J6 connector - pin header J4

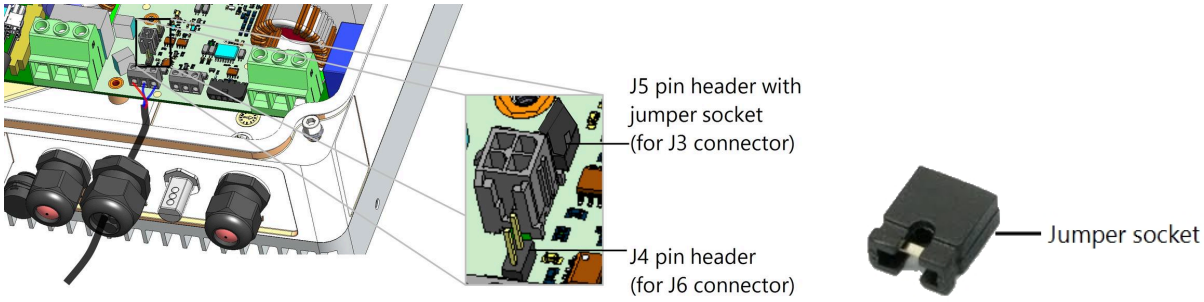


Figure 6: Pin holders (jumper sockets removed)

7. Close the device cover.

Technical Specifications

Sensor type	PT100 (100 Ohms @ 0°C) to IEC 751, Class B, 3/4 wire
Construction	6.0mm diameter stem in 316 stainless steel
Termination	IP67 aluminium alloy weatherproof connection head with 4 wire connection block, M20 x 1.5mm cable entry (gland included)
Process connection	1/2" NPT parallel (NA) 1/2" BSP parallel (Europe, APAC, Australia)
Probe temperature range	-148°F to +842°F (connection head @ 338°F) / -100°C to +450°C (connection head @ 170°C)
Probe diameter	Ø6mm (1/4")
Probe length	150mm 1/2"BSPP
Ordering information	NA: HOTWTR-SENS-NA-S1 Europe, APAC, Australia: HOTWTR-SENS-RW-S1